

Ademco Vista 40 / First Alert 1220 C

Zones - 9 Hardwired, up to 64 total zones with wireless

Partitions - 2

Wireless - Yes

Batteries - Main Panel 12 volt rechargeable Gel-Cell inside main panel
AC Transformer is 16.5 Volts

Doors/ Windows/Motions 3-volt Lithium (Panasonic CR123A)

Smoke Detector 2 9-volt Alkalines

Keyfobs and Panics 2 3-volt Lithium (CR2025 or CR2430
Lithium)

Panic Buttons Police Panic - * and #

Fire Panic - 1 and *

Medical Panic - 3 and #

Status - Press * if keypad shows NOT READY to view open zones

Arm Away - 4-digit code + 2 (AWAY) to arm everything

Arm Stay - 4-digit code + 3 (STAY) to arm everything but motions

Quick-Arm (If Enabled) # + 2 for AWAY, # + 3 for STAY

Instant Arm - 4-digit code + 7 (INSTANT), also bypasses motions

Max Arming - 4-digit code + 4 (MAX), arms everything including motions
instant

Disarm - 4-digit code + 1 (OFF)

Silence Alarm - 4-digit code + 1 (OFF) twice to turn off siren and reset display

Bypass - 4-digit code + 6 (BYPASS) + Zone (01, 02 03 etc)
(Keypad will beep and BYPASS + Zone will show on display)

Door Chimes - 4-digit code + 9 (CHIME)

Reset Smoke - 4-digit code + 1 (OFF) twice to turn off siren and reset smoke (If this does NOT reset smoke detector set for service, smoke is bad)

Alarm Memory 1. Enter 4-digit code + # + 6 + 0, select 0 for Recent or 1 for Complete log

2. Select Partition (press 0 for all partitions)

3. Press 1 for previous log entries or 3 for next log

entries

4. Press 8 to select category and 8 again for next entry

5. Press * to exit

Voice Keypads

Voice Chime # + 0 + 2 + 4 to Enable or Disable (Keypad should say "ON" or "OFF")

Show Status # + 0 + *

Show Faults Press **

Record 1. Press # + 0 + 1 (LED turns ON)

Message 2. Record message up to 2.5 minutes

3. Press 1 to end (LED begins FLASHING)

Play 1. Press # + 0 + 3

Message 2. Recorded message will play (LED turns OFF)

Adjust Volume Press # + 0 + 2 then press 3 or 6 to raise or lower volume